

PRIORITY FLAP



The uppermost connection line between FS tank and backup tank has to be fitted on site when using a priority flap. Attention should be paid to the flow direction and horizontal installation.

Priority flap

Special priority flap allows the upper section of the FS tank to be priority-charged when connected to an expansion tank. Can be used with a maximum boiler output of 70 kW.

Specifications

Type	VK 1
Item no.	1630004
Length	80 mm
Connection	1¼"
Material	Red brass with integrated plastic flap